



**TECHNICAL SPECIFICATION**

Material -	wooden composite
Weight -	2.1 – 10 kg (depending on size)
Placement -	wall
Dimmer -	manual
Light color -	extra warm white
(plus extra colors depending on the selected type of light fitting)	
Input power/ el. current -1 m LED strip	4.8W
for decorative light -	0.4A

 
● **Power bank HOCO B31A**

- 2 pieces included in the packaging
- Capacity - 30,000 mAh
- USB cable - included
- Charger (USB, 2A) - not included
- (standard mobile phone charger may be used, electric current 2A recommended)
- Weight 450 g



● **Wall mounting**

- There are two clinches and dowels enclosed for mounting the light on wall.
- Drill two holes in the wall, each hole 5mm in diameter, distance between the two holes 230mm.
- Slip in the dowels inside these holes.
- Fasten the clinches inside the dowels.
- Hang the light.

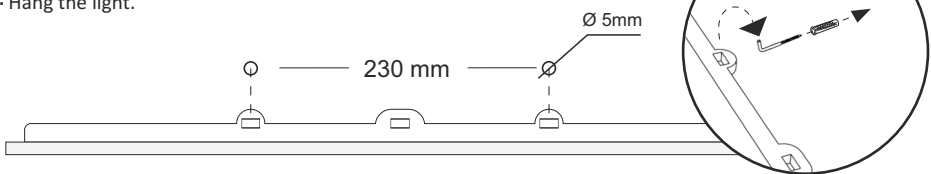

**PICTURE LIGHT WALL HANGING WITH POWER BANK**

- The product is intended for interior usage according to corresponding protection standard – Ip20, i.e. for usage in the interiors of buildings and areas that are not exposed to water or dampness.
- The product meets all CE and RoHS certificates for daily usage.
- The light source are LED strips with SMD components.
- The light is dimmable using a proper dimmer.
- The light surface may be cleaned by a dry or moist cloth. Standard household cleaning products may be used.
- In case of defect or breakdown please contact a certified electrician or contact us at our helpdesk info@li-go.cz.
- The warranty period is 24 months from purchase. The warranty does not cover damages due to other usage than intended, improper treatment or operation, failure due to an accident, normal wear & tear during time or incompliance with this manual. Furthermore, the warranty does not apply to damages caused by atmospheric factors and overvoltage, and to mechanical and electric damages of the input and output components and powering sets.

## CONNECTION AND CONTROL OF A PICTURE LIGHT UNIT WITH A POWER BANK

1. Hang the light unit on both hooks so that it hangs firmly on the wall.

2. Insert the charged power bank into the light unit. (picture A, arrow 1)

**Attention. When inserting, the power bank must have the button down.**

3. To activate the power bank, press the button on the bottom of the light unit. (pic B, arrow 2)

4. Switch on the light unit with the touch control. (Pic C, arrow3)

 
 
 
 
If you touch the control for a longer time, the light unit starts to dim or add to the intensity.

If you switch off the light unit, the power bank will switch to economy mode after a few seconds.

For next switching on, activate the power bank as in picture B.

5. To remove a discharged power bank, hold it from the sides with two fingers and pull it out (pic D arrow 4) and in the same way you can insert the charged power bank back.

**Attention. When inserting, the power bank must have the button down**

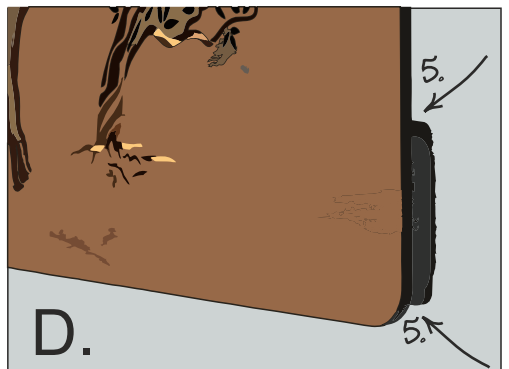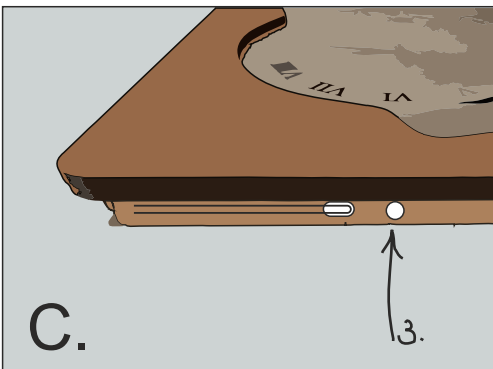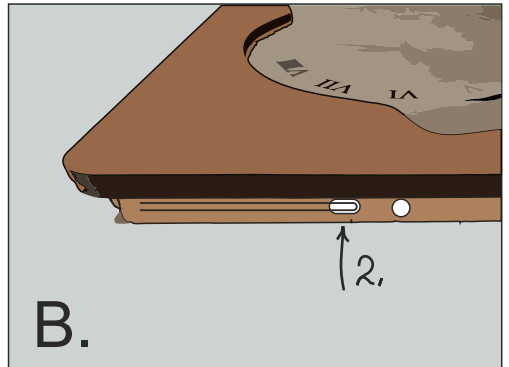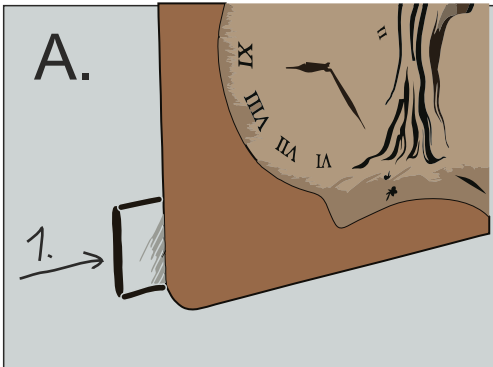

Note 1: The power bank is charged with a standard USB charger; e.g.: for mobile phones. The recommended charging current is 2A (the charger is not a part of a light unit.)

Note 2: It is not possible to connect a remote control to the light unit.